



# Installation in 6 simple steps:


Included:

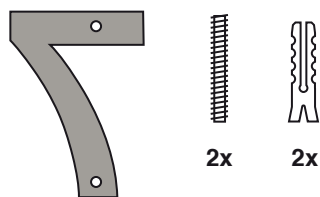


Prepare in advance:

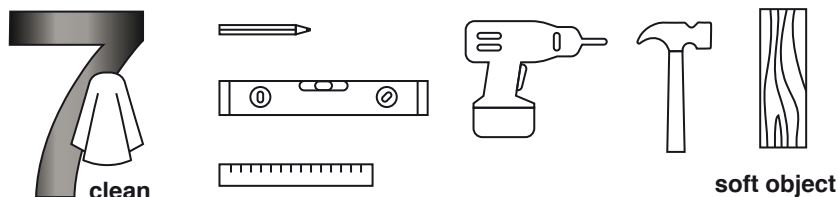


- 1.** Measure the distance between the two screw holes on your number.

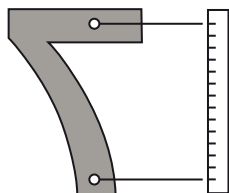


- 2.** Draw the dots on the wall.

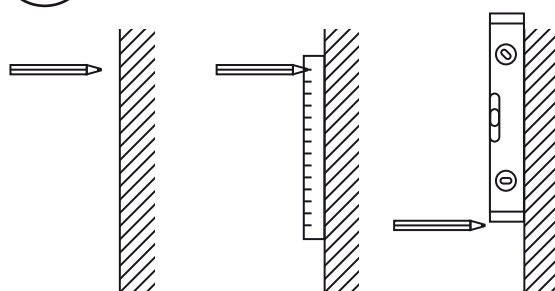


- 3.** Then drill two holes matching the dots.

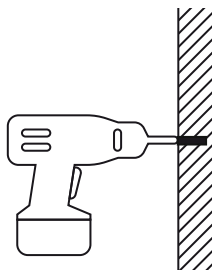


- 4.** Use a hammer and tap the two plastic plugs into the screw holes.

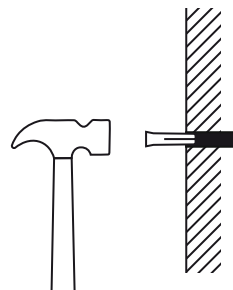

- 5.** Tighten screws on the back on the number.

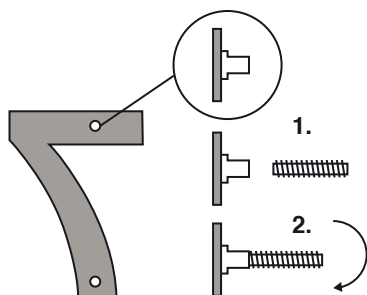

- 6.** Careful. Use a soft object to cover the surface of the number, then use a hammer to tap the number, until the nail is fully inserted.

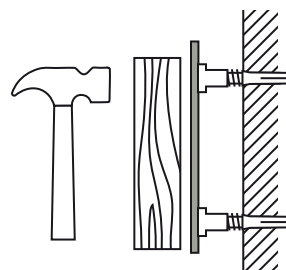


**You're done!**


**XAPTOVi**

# Montage in 6 eenvoudige stappen:

In de verpakking:

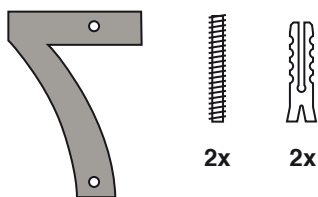


Zet van te voren klaar:

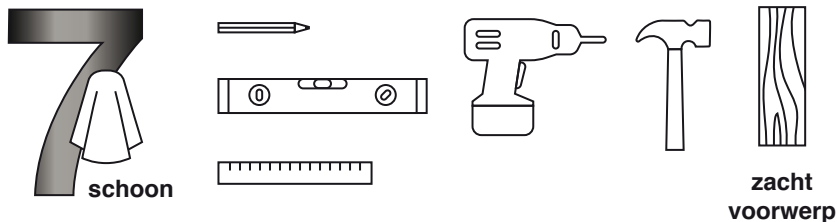


**1.**

Meet de afstand tussen de twee schroefgaten op uw huisnummer.

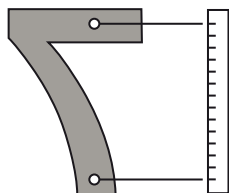


**2.**

Teken de boorgaten op de muur.

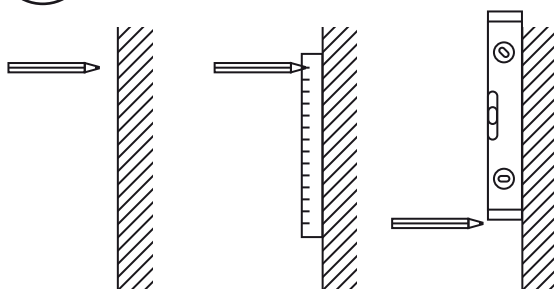


**3.**

Boor dan de 2 gaten op de getekende plek.

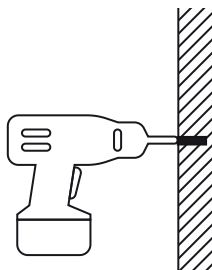


**4.**

Gebruik een hamer om de pluggen in de boorgaten te slaan.

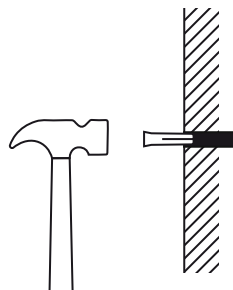


**5.**

Draai de schroeven in de achterkant van het huisnummer.

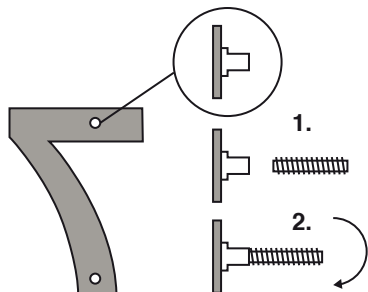

**6.**

Voorzichtig. Plaats een zacht voorwerp tussen de hamer en het huisnummer en tik vervolgens zachtjes het geheel in de pluggen in uw muur.

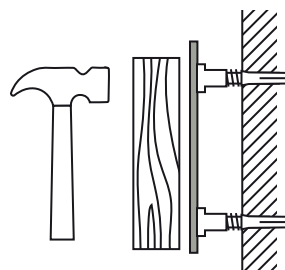

**KLAAR!**

**XAPTOVi**